


# **INFLATION BLOWER**

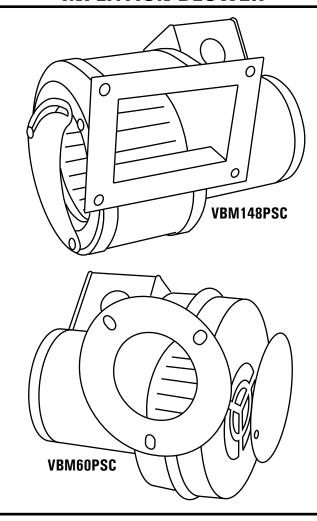

# WARRANTY

J&D Manufacturing warrants all products are free from defects in materials and workmanship under normal use for the period of one year from date of purchase. Our warranty does not cover normal or regular wear and tear. J&D Manufacturing can repair or replace at our option, any product or part of the product that is found to be defective. Our warranty applies to materials only, and does not include return freight, delivery, loss or damage to personal property, cost of removal or installation, any incidental or consequential damages or labor. This warranty does not apply to products which are misused, abused, altered, improperly installed or subject to negligence. All warranties must be approved through our warranty department. The original purchaser must present a copy of the invoice for the defective product. One year is our standard warranty unless specified on our literature or in the installation instructions or user manuals.

## INSTALLATION


Please read over all instructions carefully before you begin.

If you have any questions please call your local dealer, or contact J&D Manufacturing at 1-800-998-2398.

## INSTALLATION INSTRUCTIONS

- A minimum of 12" unobstructed space from the blower intake is required.
- Mount so drain hole in bottom of motor is facing down.
- Only mount to a surface that can safely bear the weight of blower fan.
- ALL ELECTRICAL WORK SHOULD BE COMPLETED BY QUALIFIED PERSONNEL AND MEET NATIONAL, REGIONAL AND LOCAL CODES.

#### **MOUNTING FLANGE DIMENSIONS**

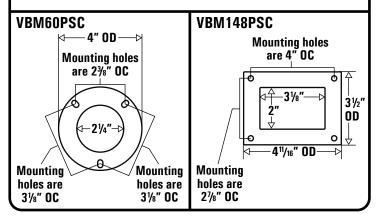

#### **OPERATION INSTRUCTIONS**

• Amount of airflow can be controlled by adjusting the damper.

# **MAINTENANCE INSTRUCTIONS**

- Disconnect power before cleaning or maintaining your blower in order to prevent serious injury or death.
- Service and repair of blower should only be completed by a qualified technician.
- For maximum efficiency and blower life, keep the following free from dirt and dust: impeller and impeller blades, intake opening, housing, and blower opening
- Blower unit is lubricated at the time of manufacturing and needs no further lubrication maintenance.



6200 Hwy 12 • Eau Claire, WI 54701 • 1-800-998-2398

Visit our website at www.jdmfg.com